

- NOTES:
1. IM SOLENOID GROUNDED THROUGH MOUNTING.
 2. EVAP COVER GROUNDED HEAT SHIELD.
 3. THE DISPENSER CONTROL HAS A BUILT IN INVERTER BOARD WHICH CONVERTS THE AC VOLTAGE TO 120V DC. THE BR/WH AND RD/WH WIRES SWITCH POLARITY DEPENDING ON CRUSH/CUBE POSITION. SEE TABLE BELOW:

CRUSH/CUBE	BR/WH	RD/WH
+	+	+
-	-	-



WARNING

Electrical Shock Hazard
Disconnect power before servicing.
Replace all parts and panels before operating.
Failure to do so can result in death or electrical shock.

WIRING DIAGRAM

